




SSD Full Wood chair

Assembly guide

recommandations / recommendations




contenu du pack / pack content

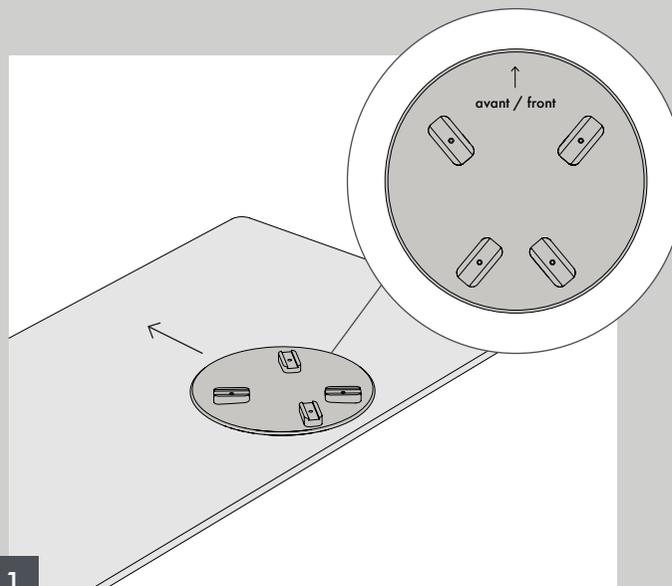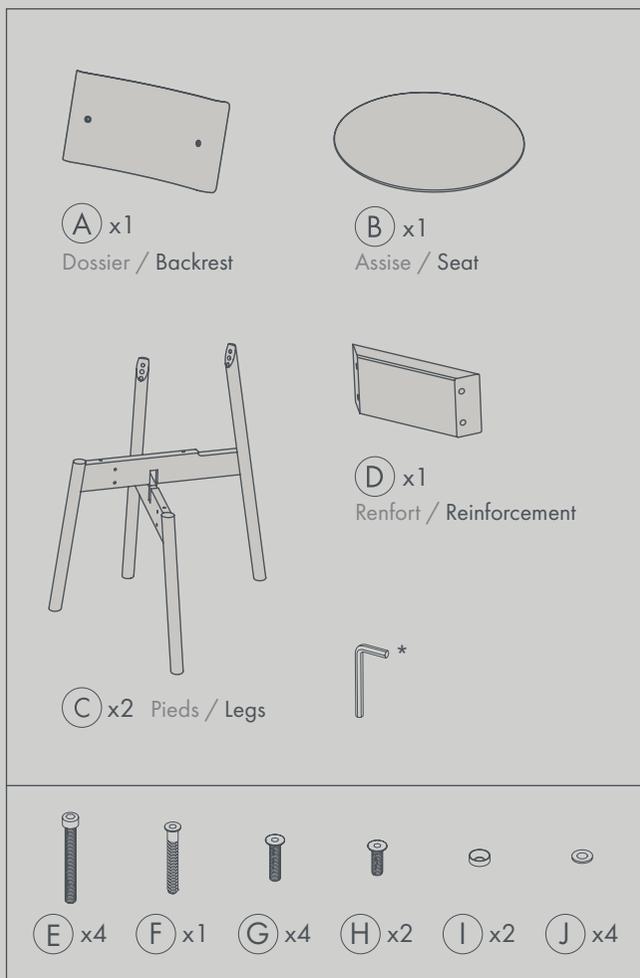

1

Positionnez l'assise (B) retournée sur une table, comme indiqué sur le dessin ci-dessus.


Place the seat (B) upside down on a table, as shown in the drawing above.

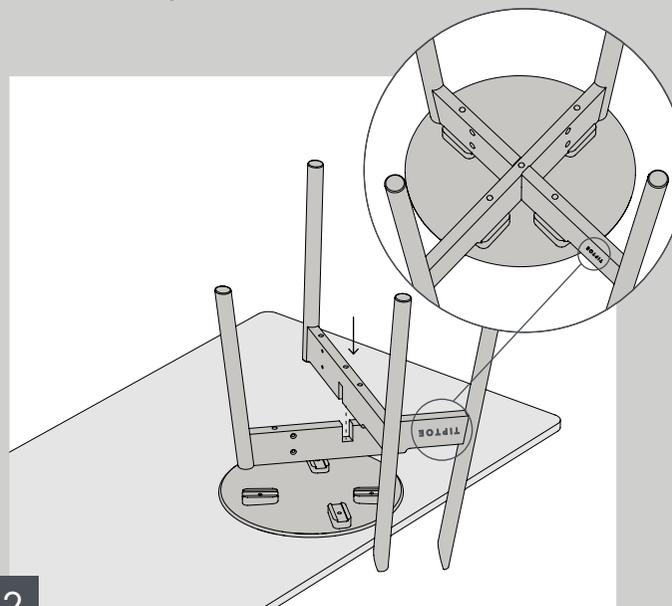

2

Emboîtez les pieds (C).


Join the legs (C).

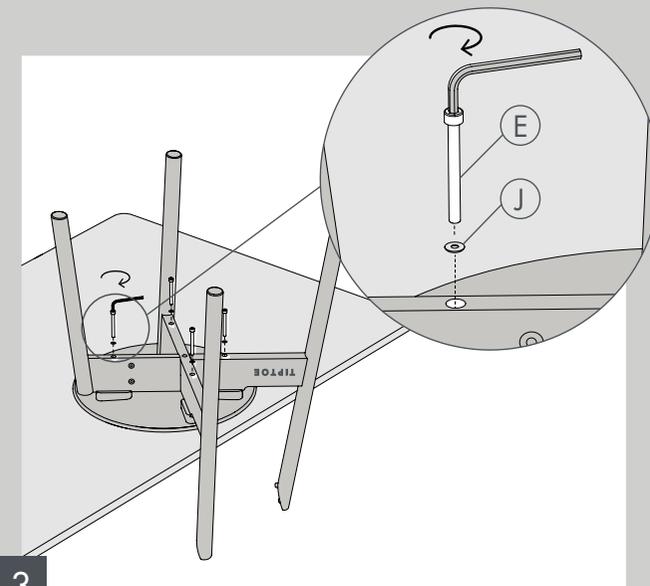

3

Placez les pieds (C) dans les rainures de l'assise (B). Placez les 4 rondelles (J) et visser les 4 vis (E).

Place the legs (C) in the grooves of the seat (B). Place the 4 washers (J) and screw in the 4 screws (E).

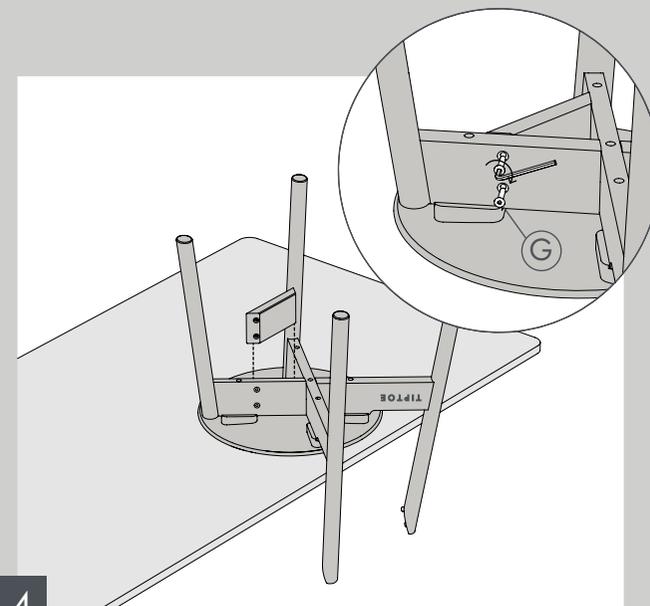

4


Placez le renfort (D) puis visser avec la clé Allen les 4 vis (G).

Place the reinforcement (D) and then screw in the 4 screws (G) with the Allen key.

* La chaise SSD Full Wood est livrée avec une clé Allen.
The SSD Full Wood chair is delivered with an Allen key.

SSD Full Wood chair


Assembly guide

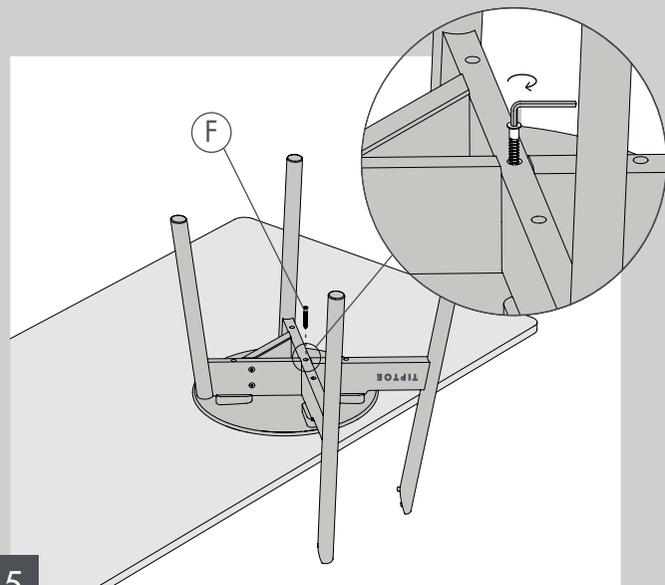

5

Insérez la vis (F) puis serrez-la au centre de la croix, à l'aide de la clé Allen.


Insert the screws (F) and tighten it in the center of the cross, with the Allen key.

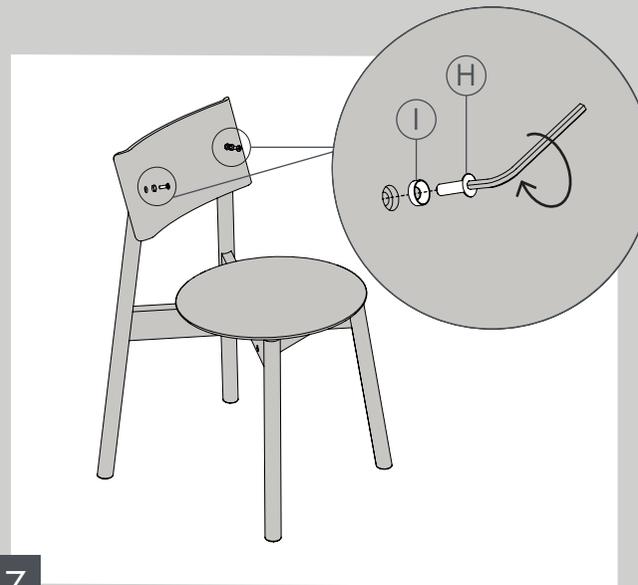

7

Vissez le dossier (A) aux pieds (C) en insérant les coupelles (I) et les vis (H).

Screw the backrest (A) to the legs (C) by inserting the collars (I) and the screws (H).

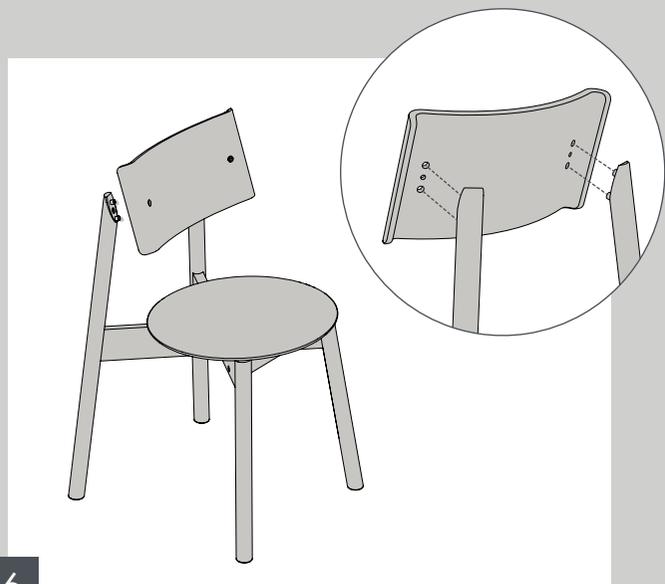

6

Retournez la chaise et posez-la au sol. Positionnez le dossier (A) dans les emplacements prévus.

Turn the chair over and place it on the floor. Position the backrest (A) in the slots provided.



TIPTOE

tiptoe.fr | @tiptoedesign